

# Hori Racing Wheel 4

## Setup Guide



### Activating the wheel


- Set MODE to OFF
- Power on console
- At user selection screen, press and hold PS button on Wheel for 5 seconds
- Use wheel to select user

The wheel should now be synced with PS4 console



### Configuring Wheel

- Set MODE to ON
- Push/Click the function you wish to configure (R. Paddle, L. Paddle, R. Pedal, L. Pedal)
- LED will flash Green – during this time Push/Click the button you wish to link configuration (Circle, Square, Triangle, X, R1, R2, L1, L2)

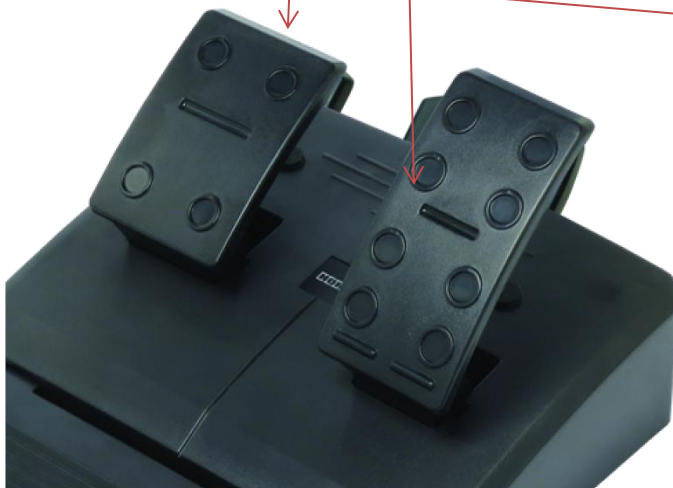

Example:  
Use this method to link R2 with R. Pedal and L2 with L. Pedal

### Note:

Most games are automatically fully configured. Please try to use the Racing Wheel with default configuration first.